


DO IT YOURSELF

with the experts on-hand

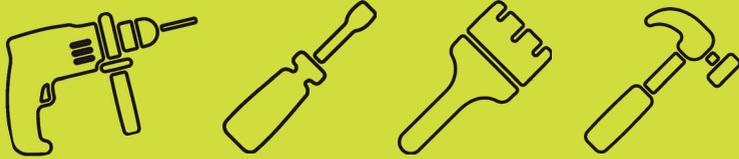


How to...

Fixing Large Format Tiles onto Sand:Cement Screed/Concrete



5. Nicobond Professional Levelling System

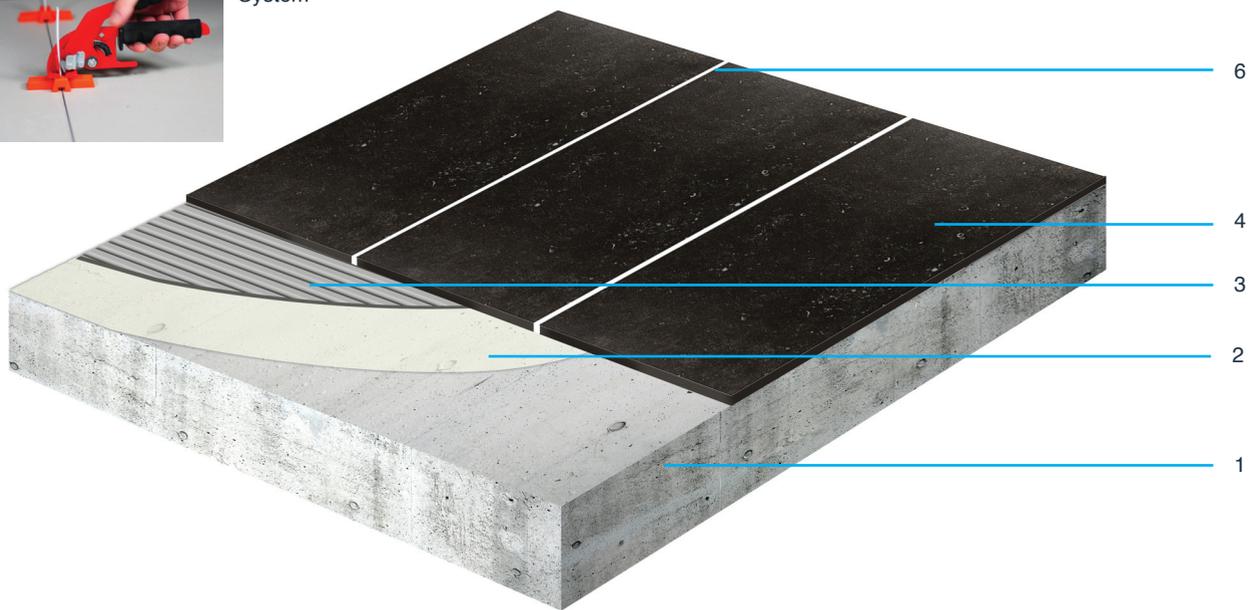

1. Ensure the sand:cement screed or concrete is fully cured, flat and clean.
2. If the base is porous, prime with diluted Nicobond Primer in ratio 4 volumes of water to 1 volume of Nicobond Primer and allow to dry.
3. Apply a layer of adhesive from 4mm up to 30mm thick onto the base using the 20mm half round Nicobond Large Format Notched Trowel.
4. Place the tiles into the wet adhesive using a slight sliding action to ensure solid bedding of the tiles.
5. The Nicobond Professional Levelling System should be used to ensure tiles are flat and level.
6. Fill joints between tiles using recommended grout.

* Allow at least 6 weeks for structural concrete floors to cure and further 3 weeks for subsequently applied screed. In the event that a rapid setting cement replacement is used the drying time of screed will be greatly reduced. Refer to the Technical Team for further information.

* It should be noted that a large format tile is a tile with no tile edge greater than 1200mm or a facial area greater than 3600cm²