
How to tile onto ... **Tile Backer Board on Solid Walls**

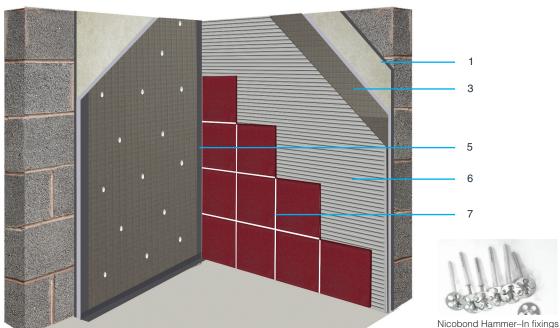

2. Apply dots of adhesive to the reverse side of the board (max 300mm centres), for additional stability also apply adhesive around the edge of the board.



4. Hammer-In fixings to provide a secure installation of the Tile Backer Board.



- 1. Ensure the wall surface is free from dust and grease.
- 2. Using Nicobond Quickfix apply dots of adhesive to the reverse side of the board. A 600 x 2400 x 12.5mm thick board will typically have 12 dots of mortar up to 30mm thick. Ensure outer dots are located at board edges.
- 3. Place the board vertically on the wall surface and bed firmly into place. Always use a straight edge and level to ensure good alignment.
- 4. Once the adhesive has set, use the hammer-in fixings to secure the tile backer board. The fixings to be positioned so as to be hammered in through the middle of the dot of adhesive.
- 5. The joints between boards should be taped over using either Nicobond Jointing Tape for dry areas or Nicobond Wet Room Waterproof Tape and components for wet areas.
- 6. Spread the recommended adhesive over the surfaces and fix new tiles using the notched trowel or solid bed method as appropriate.
- 7. Fill the joints between tiles with the recommended grout using a float grouter. Remove surplus grout from the surface with a sponge and smooth the joints with a rounded stick to achieve an even better finish.

* The dot and dab fixing system is not recommended for use with boards less than 12.5mm thick. For the thinner boards, using a notched trowel apply a solid bed of adhesive over the board surface and press firmly into position.

Recommended Tile Adhesives



Nicobond Waterproof



Nicobond Rapidflex




Nicobond Floor & Wall



Nicobond **Elexible Grout Plus**

Nicobond Starlike Extreme





Nicobond Tile Backer Board





Manufacturing Tiling Solutions Since 1958

N&C Tiles & Bathrooms Trade Counters & Showrooms

1A - 1B Alexander Place Lower Park Road, New Southgate London N11 1ST Tel: 020 8361 6050 Fax: 020 8361 4757

8 Ascent Park, Edinburgh Way Harlow, Essex CM20 2HW Tel: 01279 621980 Fax: 01279 621981

14 Meridian Trading Estate Bugsby Way, Charlton London SE7 7SJ Tel: 020 8269 5960 Fax: 020 8269 5961

1 Cliffside Trade Park, Motherwell Way Lakeside. West Thurrock Essex RM20 3XD Tel: 01708 680180 Fax: 01708 680181

16 Arlington Business Park Whittle Way, Stevenage Hertfordshire SG1 2BD Tel: 01438 315400 Fax: 01438 740338

9 - 11 McDonalds Business Park Maylands, Hemel Hempstead Hertfordshire HP2 7EB Tel: 0845 2606 025 Fax: 0845 2606 026

8D Pompey Centre, Fratton Way Southsea, Portsmouth PO4 8TA Tel: 02392 894599 Fax: 02392 894598

5 Tower Court, St David's Road Swansea Enterprise Park Swansea SA6 8QL Tel: 01792 797337 Fax: 01792 774019

N&C Tiles & Bathrooms Distribution Centres, Trade Counters & Showrooms

N&C Building Materials 41 - 51 Freshwater Road Chadwell Heath

Romford, Essex RM8 1SP Tel: 020 8586 4600 Fax: 020 8586 4646

C1 Cothill Trading Estate Plympton, Plymouth PL7 1SR Tel: 01752 339724 Fax: 01752 342746

B1 - B3 Sneyd Trading Estate Sneyd Hill, Burslem Stoke on Trent ST6 2PA Tel: 01782 575727 Fax: 01782 575641

26 Colquhoun Avenue Hillington, Glasgow G52 4BN Tel: 0141 880 1200 Fax: 0141 880 1212

4 Waterloo Industrial Estate Flanders Road, Hedge End Southampton SO30 2QT Tel: 01489 779700 Fax: 01489 779701

3 - 4 Cardiff Trade Park Hadfield Road, Cardiff CF11 8AQ Tel: 02920 390146 Fax: 02920 224356

2 City Park, Industrial Estate Gelderd Road, Leeds LS12 6DR Tel: 0113 224 4630 Fax: 0113 224 4631

2 - 5 Altbarn Close Wyncolls Road, Severalls Park Colchester, Essex CO4 9HY Tel: 01206 844 161 Fax: 01206 845 878





Nicholls and Clarke Group of Companies

