



DO IT YOURSELF

with the experts on-hand

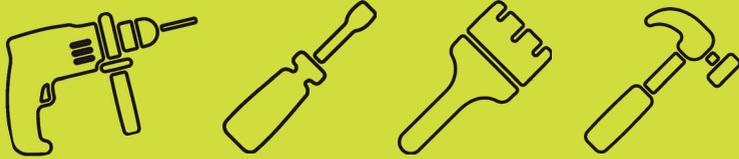

How to...


Fixing Nicobond Tile Backer Board to Stud Partition Walls

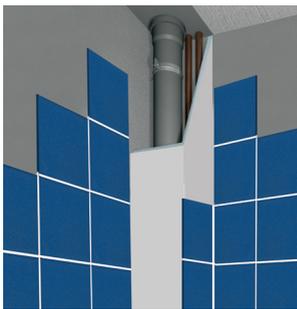

Smooth, paintable pipe covers are a quick and effective solution for hiding away unsightly pipework, simply choose the correct cover size and cut to length. Run a bead of Nicobond PU Adhesive along the 2 leading edges and press firmly into position.



Nicobond Galvanised Screws and Washers

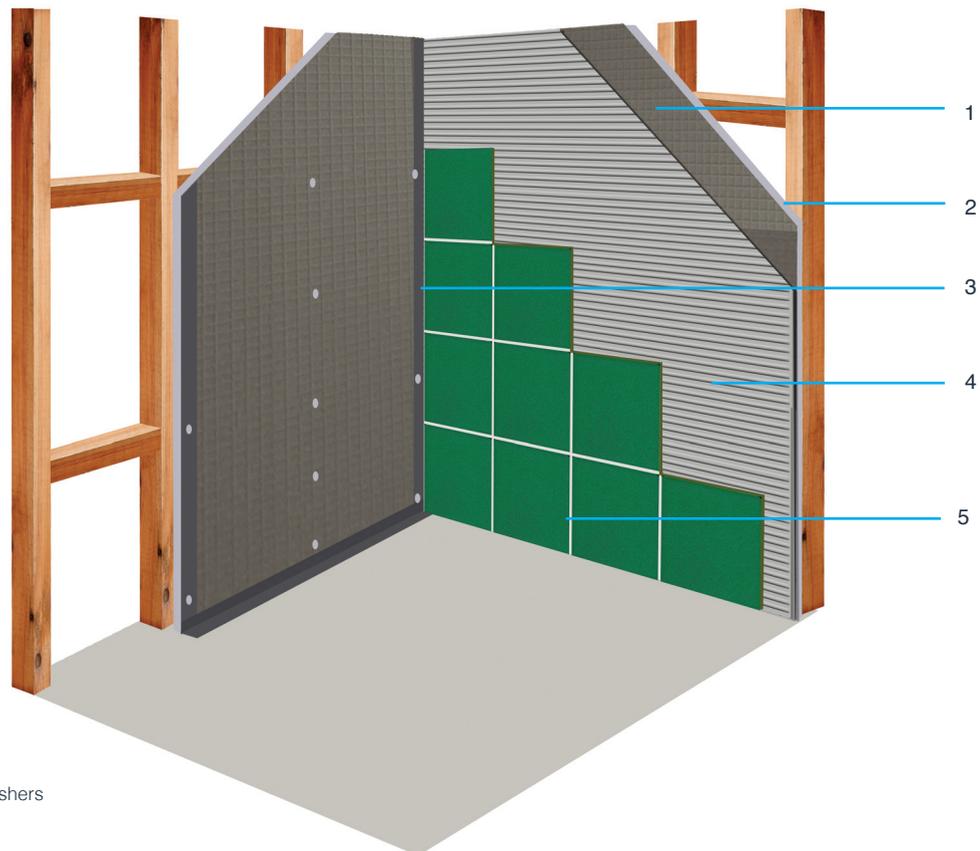

1. Screw board to stud work using Nicobond Galvanised Screws & Washers, taking care to screw down until the washer bites into the board. For boards less than 20mm thick, vertical studs should be set at 300mm centres. For greater thicknesses 400mm centres are suitable.
2. All board edges must be supported by timber noggins and fixed using approx 12 fixings on a 1200 x 600mm board or 21 fixings on a 2400mm x 600mm board. Fixings should be set at approx 300 - 400mm centres.
3. The joints between boards should be taped over using either Nicobond Jointing Tape for dry areas or Nicobond Wet Room Waterproof Tape and components for wet areas.
4. Spread the recommended adhesive over the surfaces and fix new tiles using the notched trowel or solid bed method as appropriate.
5. Fill joints between tiles using recommended grout.

* Minimum thickness of board for screw fixing is 10mm.
 * Stud centres to be set subject to loading requirements.