



# DO IT YOURSELF

*with the experts on-hand*

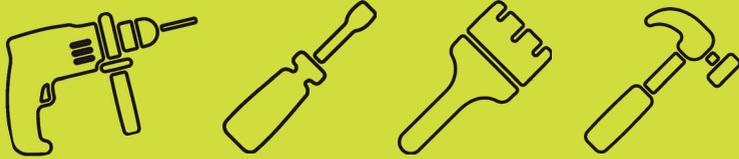

*How to tile onto...*

## Oil Based Gloss Painted Surfaces

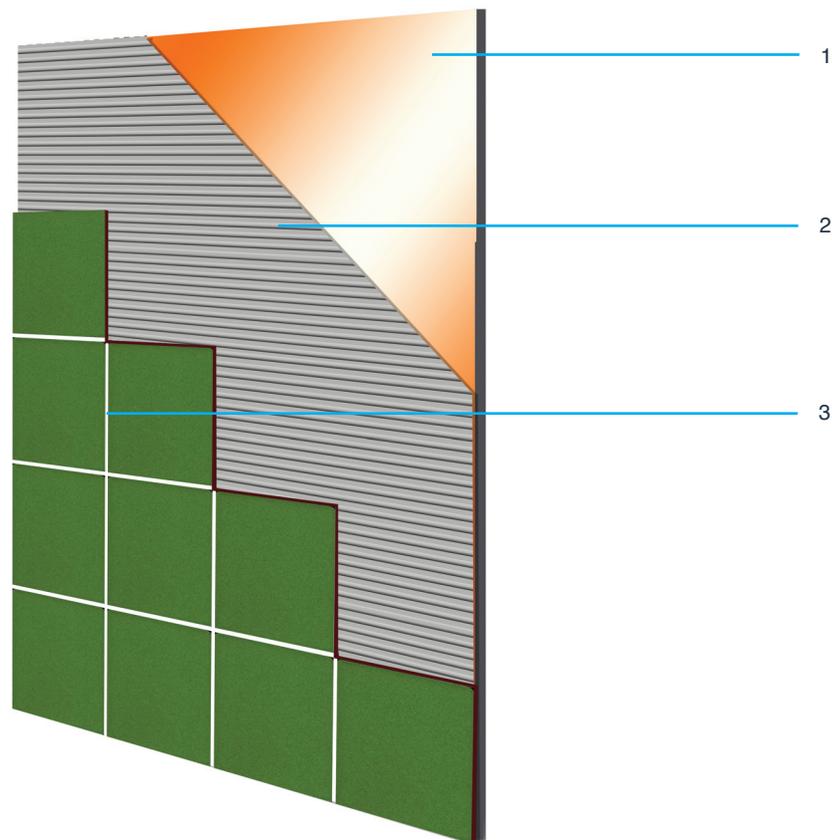

1. Thoroughly clean existing paintwork ensuring it is firmly bonded to the substrate. It is advisable to tile to gloss paint only. If the surface is suspect, cover with Nicobond Tile Backer Board.
2. Spread the recommended adhesive over the existing paint and fix new tiles using the notched trowel or solid bed method as appropriate.
3. Fill joints between tiles using recommended grout.

\* Ensure the paint is sufficiently sound to bear the weight of new tiling.

\* Tiling to water based paints /distemper is not recommended, these should be removed before tiling commences.

\* Only absorbent ceramic tiles may be used with ready mixed products for tile on tile, if porcelain tiles then use cement based adhesives.