


# DO IT YOURSELF

*with the experts on-hand*



*How to tile onto...*

## Tiling onto Existing Tiles

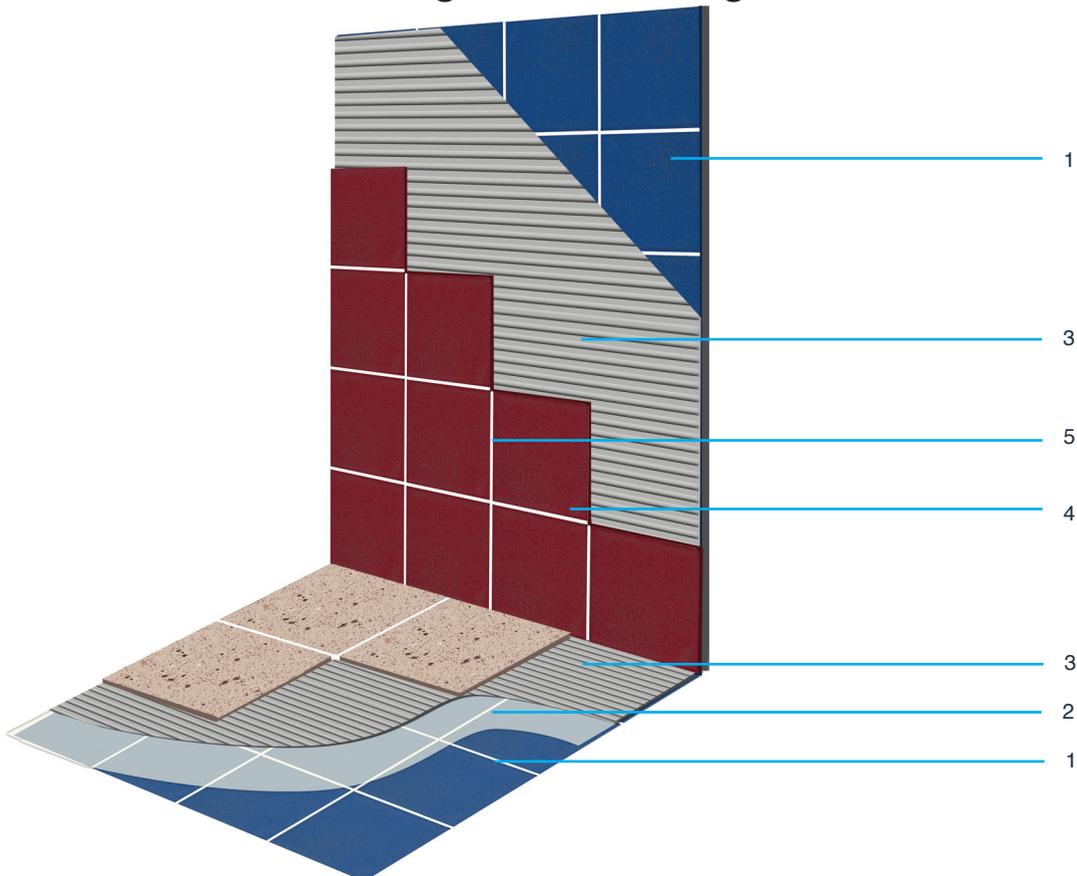

1. Thoroughly clean tiles to remove dirt, grease, fats or any other contamination. Nicobond Super Cleaning Crystals are a detergent and should be diluted in hot water for this purpose. Ensure existing tiles are firmly bonded to substrate.
2. Existing unglazed or terrazzo floor tiles may be slurry primed incorporating Nicobond Primer and the recommended adhesive.
3. Spread the recommended adhesive over the existing tiles and fix new tiles using the notched trowel or solid bed method as appropriate.
4. Fix new wall tiles with recommended paste or powder based adhesives. Fix floor tiles with the recommended powder based products.
5. Fill joints between tiles using recommended grout.

\* When fixing tiles to impervious backgrounds such as existing tiles the setting time of adhesives will be extended.

\* When re-tiling walls, ensure the overall weight of tiling does not exceed the permitted levels of 32kg/m<sup>2</sup> for plasterboard and 20kg/m<sup>2</sup> for gypsum plaster.

\* Paste adhesive is only suitable for wall tile applications and for use with ceramic bodied tiles.