


DO IT YOURSELF

with the experts on-hand



How to tile onto...

Surface Contaminated Sand: Cement
Screed/Concrete or Temporary Installations

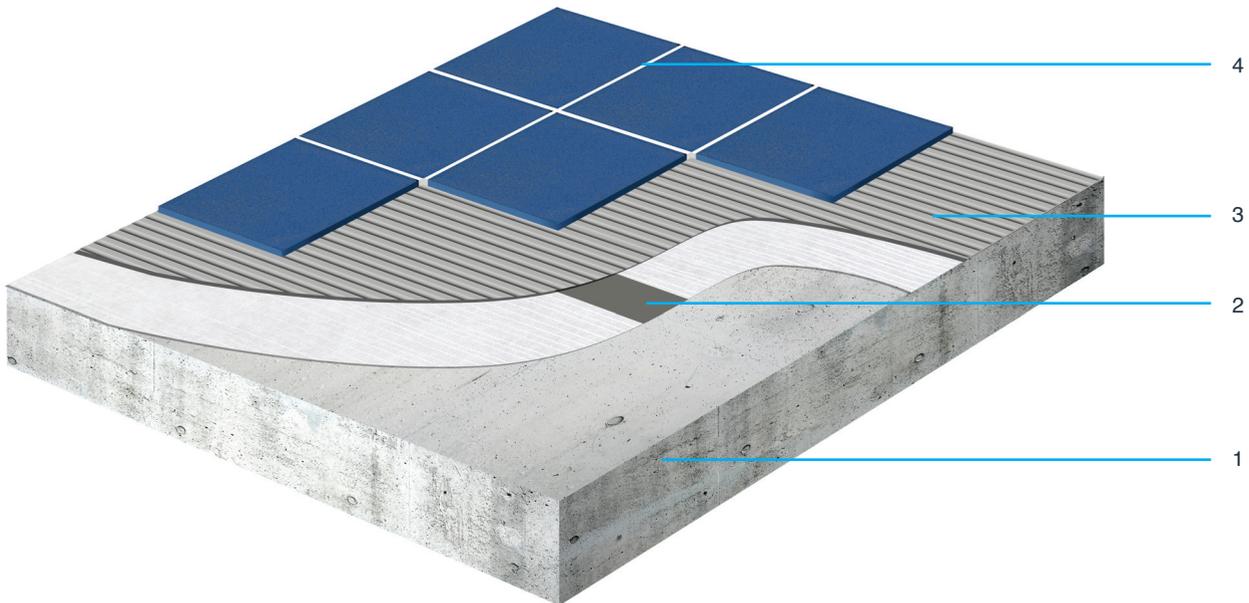

1. Ensure the sand:cement screed or concrete is fully cured, flat and clean.
2. Loose lay the Nicobond Disconnecting Sheet onto the screed surface and tape over joints with Nicobond Jointing Tape.
3. Tiling can commence immediately. Press the tiles into the recommended adhesive with a slight sliding or twisting action. Large format tiles should be back buttered.
4. Fill joints between tiles using the recommended Grout.

* Allow at least 6 weeks for structural concrete floors to cure and further 3 weeks for subsequently applied screed.