



DO IT YOURSELF

with the experts on-hand

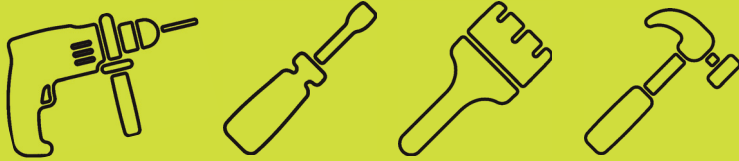

How to tile onto...

Cement Screed or Concrete

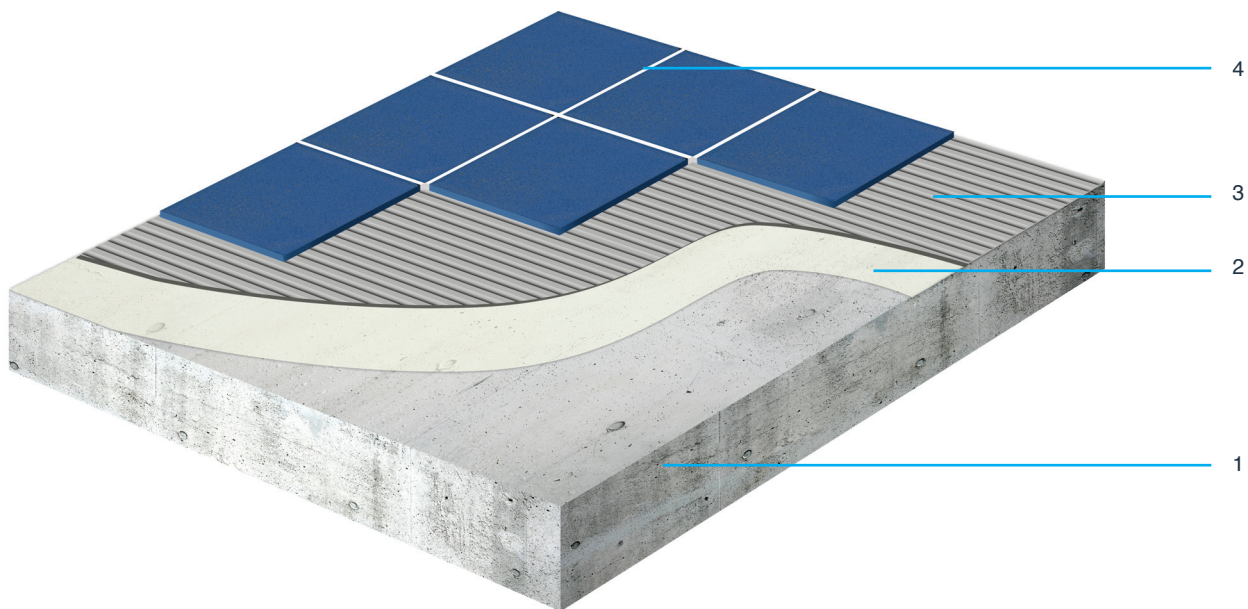

*Allow at least 6 weeks for structural concrete floors to cure and further 3 weeks for subsequently applied screed. In the event that a rapid setting cement replacement is used the drying time of screed will be greatly reduced. Contact the Technical Team for further information

1. Ensure the cement screed surface or concrete floor is fully cured, flat, clean and free of grease before commencing.
2. If the floor is porous, prime the surface with diluted Nicobond Primer (*ratio 4 volumes of water to 1 volume of Nicobond Primer*).
3. Spread the adhesive 3-6mm deep using a 10mm notched trowel onto the surface to be tiled. Solidly bed tiles into adhesive using slight sliding action. Every so often use a spirit level or straight edge to check the tiles are flat. Allow to dry to recommended time.
4. Fill the joints between tiles with the recommended grout using a float grouter. Remove surplus grout from the surface with a sponge and smooth the joints with a rounded stick to achieve an even better finish.