



DO IT YOURSELF

with the experts on-hand

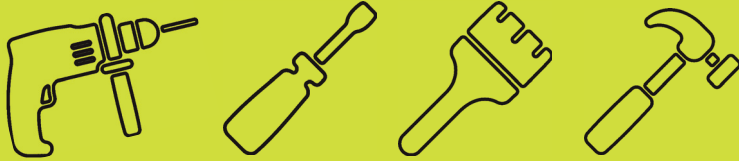

How to tile onto...

Plaster and Plasterboard (Dry Areas)

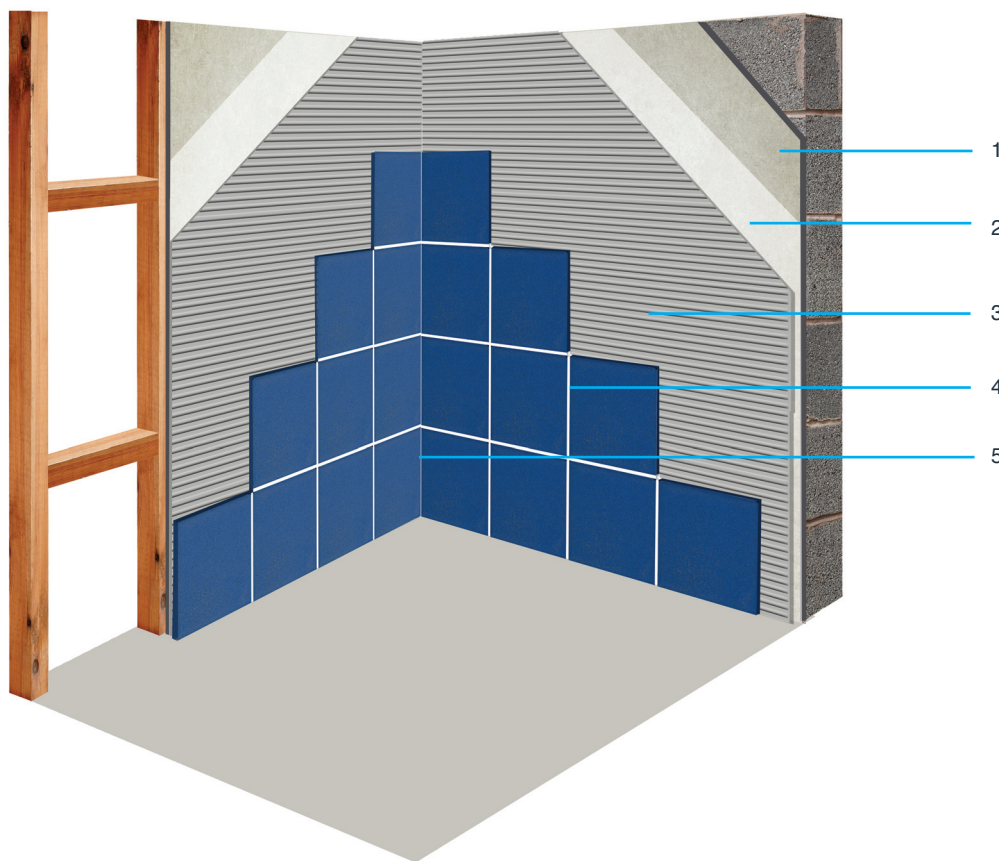

1. Either screw plasterboard to stud frame wall construction at maximum 600mm centres, or apply gypsum plaster to block work.
2. Prime the surfaces with diluted Nicobond Universal Bonding Agent and Sealer and allow to dry.
3. Spread the recommended adhesive over the surfaces and fix new tiles using the notched trowel or solid bed method as appropriate.
4. Fill joints between tiles using recommended grout.
5. Ensure movement joint is inserted into internal corners, PVC type or silicone sealant.

* New plaster needs to dry for at least 4 weeks. Tiles to be fixed to finish coat only, never the backing coat. When fixing to Plaster board ensure the boards are rigidly braced and adequately supported, fix directly to the paper face, do not skim with plaster. Weight of tiling not to exceed 32kg/m² on plasterboard and 20kg/m² onto gypsum plaster.